


Forsta Piston Seal Replacement Instructions

New
Parts

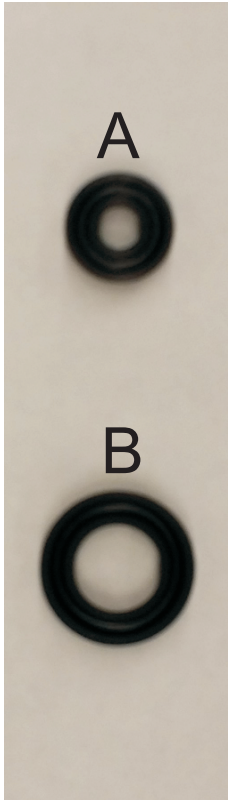


Dismantled
Piston



Replace with
new Part B



Remove
Plunger
Seal

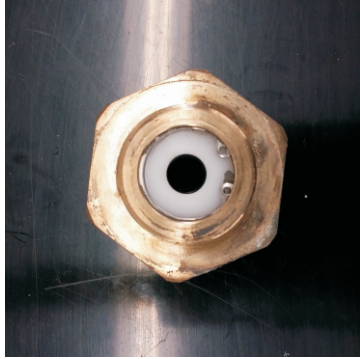

Remove
Snap Ring



Remove
all
parts





Insert new
Part A



Insert Nylon
Spacer



Reinstall
Snap
Ring

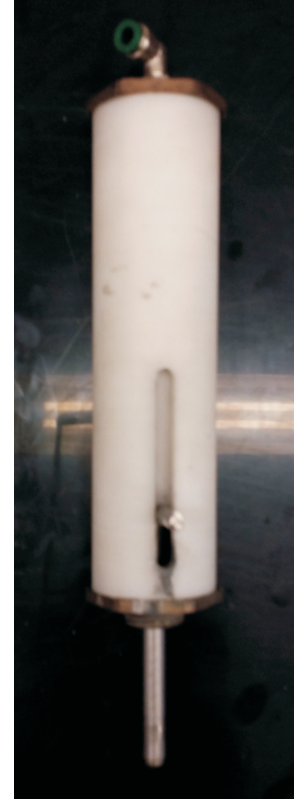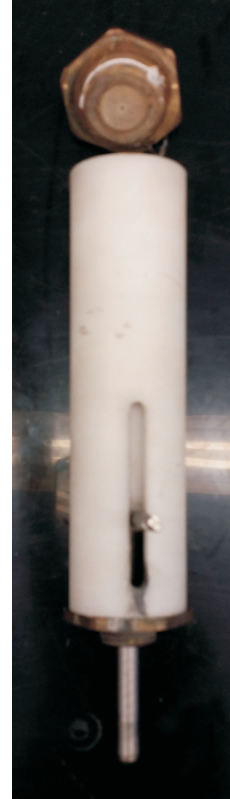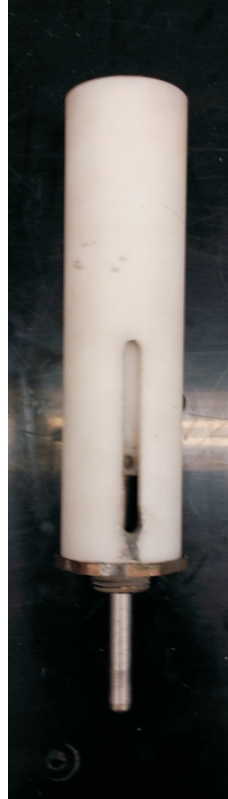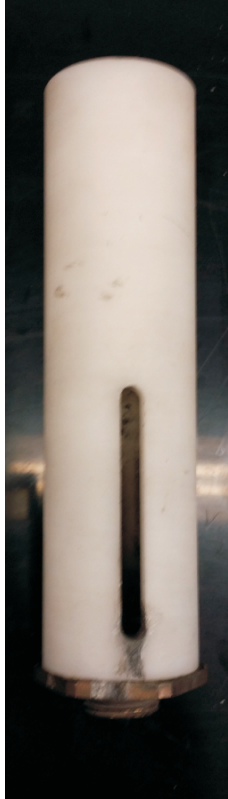

Reassemble the piston in the above order